

INSTRUKSI KERJA			
No. Dok.: IK-CP003	Tgl. Efektif: 15 Mei 2023	Revisi: 0	Hal: 1 dari 1
Ruang lingkup: Produk Chest Freezer			
<i>[Signatures]</i>	<i>[Signature]</i>	<i>[Signature]</i>	<i>[Signature]</i>

Test Gas Leakage Low Chest Freezer

PERALATAN :
1. M/C Leakage Tester




CONTROLLED COPY

KOMPONEN :

LANGKAH KERJA

1. Atur alarm titik Kebocoran ketingkat pengaturan 2 g/tahun.
2. probe Leak detector mengecek untuk pipa bagian joiner:
 *Kompresor: suction pipe, charging pipe & discharge pipe
 *Dryer: pipa kapiler, charging pipe & Sambungan Pipa-D
 *Dew pipe: Sambungan Pipa Koneksi Pipa-D
3. Ketika alarm menyala, Produk ditolak & pindah ke line service untuk di perbaiki

GAMBAR

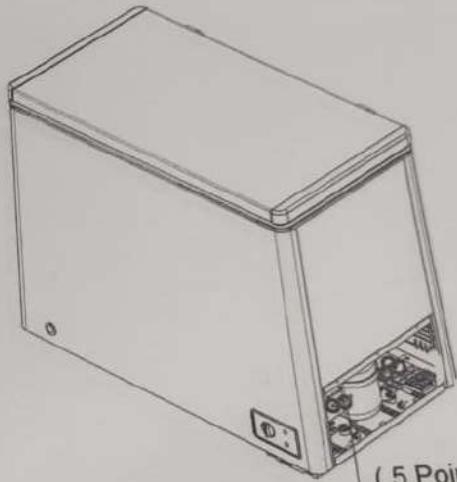

(5 Point)
Inspection Gas Leakage